


PD130 Enhanced - User Instructions

Page 2 of 9

1. Operating Instructions

1.1. Switch Setting Selections

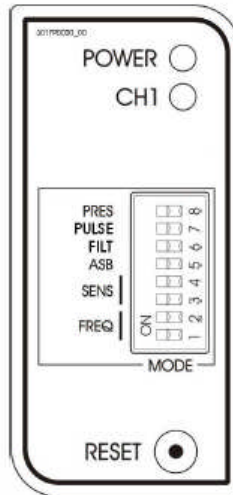

1.1.1. Frequency Switch

The frequency switches are the lower two switches, numbered 1 and 2. There are four frequency selections and are set out as follows:

<u>SW2</u>	<u>SW1</u>	
Off	Off	- High
On	Off	- Medium-High
Off	On	- Medium-Low
On	On	- Low

The frequency switches allow the loop to be shifted higher or lower depending on the switch position. The frequency of the loop is determined by the loop size, and the frequency of the switch simply causes a frequency shift on the loop.

Where more than one detector is used the detectors must be set-up to ensure that there is no cross-talk (interference) between the detectors. This can be achieved by ensuring that the loops of the two detectors are spaced sufficiently apart (approximately 2 metres between adjacent edges) and also ensuring that the detectors are set to different frequencies. As a general rule, the detector connected to the inductive loop with the greatest inductance should be set to operate at the lowest frequency. Loop inductance increases as loop size, number of turns in the loop and feeder length increases.

1.1.2. Sensitivity

The sensitivity of the detector allows the detector to be selective as to the change of inductance necessary to produce an output. There are four sensitivity selections and these are set as follows: -

<u>SW4</u>	<u>SW3</u>	
Off	Off	- High
On	Off	- Medium-High
Off	On	- Medium-Low
On	On	- Low

PD130 Enhanced - User Instructions

Page 3 of 9

1.1.3. Automatic Sensitivity Boost

Automatic sensitivity boost is a mode that alters the “undetected” level of the detector. This mode is selected by switch No. 5 on the front of the enclosure and is as follows: -

SW5

Off - Disabled
On - Enabled

Automatic sensitivity boost causes the sensitivity to be boosted to a maximum on detection of a vehicle, and maintained at this level during the presence of the entire vehicle over the loop. When the vehicle departs the loop and the detection is lost the sensitivity reverts to the pre-selected level.

1.1.4. Filter Mode

The filter mode is selected with the mode switch No. 6. The filter produces a delay turn-on time of two seconds when a vehicle occupies the loop. This is to enable small, unwanted objects to pass over the loop without being detected. The filter option may be used on any sensitivity setting and is selected as follows: -

SW6

Off - Disabled
On - Enabled

1.1.5. Pulse Relay

The pulse relay may be made to operate on detect (entry) or on “undetected” (exit) of a vehicle. This option is selected from Switch No. 7 and is configured as follows: -

SW7

Off - Pulse on Detect
On - Pulse on Undetect

1.1.6. Presence Time

The presence time may be set to permanent presence or to limited presence. In permanent presence mode the detector will continuously compensate for all environmental changes whilst there is a vehicle present over the loop. The presence mode is set with switch No. 8 and is configured as follows: -

SW8

Off - Limited Presence
On - Permanent Presence

1.1.7. Reset Switch

The detector automatically tunes to the inductive loop connected to it when the power is applied, whether on initial installation or after any break in power supply. Should it be necessary to re-tune the detector, as may be required after changing any of the switches or after moving the detector from one installation to another, momentary operation of the RESET switch will initiate the automatic tuning cycle.

PD130 Enhanced - User Instructions

Page 4 of 9

1.2. Front Panel Indicator

While the detector is tuning, the ON (Red) LED will glow and the OUTPUT LED (Green) will extinguish when the system is tuned. Thereafter, the green LED will flash at a rate of 1 Hz. This is used to indicate the frequency of the loop to the user. Every flash of the LED is equivalent to 10 kHz. It will stop when the operating frequency is reached. This operation is also performed whenever the reset button is depressed.

The ON (red) LED will glow permanently to indicate that the unit is functional. The red LED also serves as an optical interface to the DU100 Diagnostic Unit.

If faults exist with the loop the green LED will come on and flash off at the rate of 2Hz indicating the fault. If the fault is self-healing the detector will continue to operate but the LED will remain on indicating to the user that a fault has occurred. The LED will go off for a moment during an “undetected”, indicating this state, thereafter returning on. This condition can be restored by removing the power or by depressing the reset button.

The green LED will also glow whenever a vehicle is detected passing over the inductive loop.

1.3. Detector Tuning

Tuning of the detector is fully automatic. When power is applied to the detector upon installation of the system, or when a reset is initiated, the detector will automatically tune itself to the loop to which it is connected. The detector will tune to any loop to inductance range 20 to 1500 microhenries.

This wide range ensures that all loop sizes and feeder combinations will be accommodated in the tuning range of the detector.

Once tuned, any slow environmental change in loop inductance is fed to a compensating circuit within the detector that keeps the detector correctly tuned.

1.4. Detector Sensitivity

Sensitivity of the detection system is dependent on factors such as loop size, number of turns in the loop, feeder length and the presence of metal reinforcing beneath the loop.

The nature of the application determines the required sensitivity that may be adjusted by means of the sensitivity switches on the front of the enclosure.

Sensitivity levels of the PD130 have been carefully optimised for parking and vehicle access control applications. The detection of small unwanted objects such as bicycles and trolleys can be eliminated by selecting lower sensitivity levels whilst high-bed vehicles and vehicle/trailer combinations will not lose detection by using automatic sensitivity boost (ASB) option.

ASB operates as follows. When ASB is disabled the undetect level is dependent on the sensitivity setting of the detector. Hence as the detector is made less sensitive, the undetect level will reduce accordingly. When the ASB is enabled the undetect level will always be the same irrespective of the sensitivity setting and will be equivalent to the undetect level when the sensitivity is on maximum setting.

2. Modes of Operation

In the presence mode the detector will give a continuous output during the presence of a vehicle over the inductive loop. As the detector is designed with the permanent presence feature, the detector will indicate vehicle presence for an unlimited period of time. If the permanent presence is not selected, then the detect time will be dependent on the change of inductance. The presence time on the limited presence setting will be approximately 1 hour for 3% $\Delta L/L$


PD130 Enhanced - User Instructions

The pulse relay outputs a pulse of 150 milliseconds duration. When set to “pulse on detect” the detector will give a pulse on detection of a vehicle and when set to “pulse on undetect” the detector will give a pulse output when the vehicle leaves the loop.

The presence output is known as a fail-safe output. This implies that in the event of a power failure the detector will give a detect output. The pulse outputs are not fail safe and will not operate if a failure occurs.

3. Technical Specification

Self-tuning range	20 to 1500 μ H
Sensitivity	Four step switch selectable: High 0.02% Δ L/L Medium High 0.05% Δ L/L Medium Low 0.10% Δ L/L Low 0.50% Δ L/L
Filter	Switch selectable 2 Second filter
Presence Relay	Fail-safe
Pulse Relay	Switch selectable: Pulse on detect Pulse on undetect
Pulse Output Duration	150 milliseconds
Response Times	100 milliseconds
Drift Compensation Rate	Approx. 1% Δ L/L per minute
Relay Rating	5A @ 230VAC
Surge protection	Loop isolation transformer, gas discharge tubes, and Zener diode clamping on loop input
Power requirements	12 V -10% to 24 V +10% (PD134) 230V AC \pm 10 % (48 to 62Hz) Requirement: 1.5 VA Maximum @ 230V
Operating Temperature	-40°C to +70°C
Mounting Position	Shelf or DIN rail mounting
Connections	11-pin submagnal type (JEDEC No. B11-88)
Size of Housing	78mm (H) X 41mm (W) X 80mm (D)

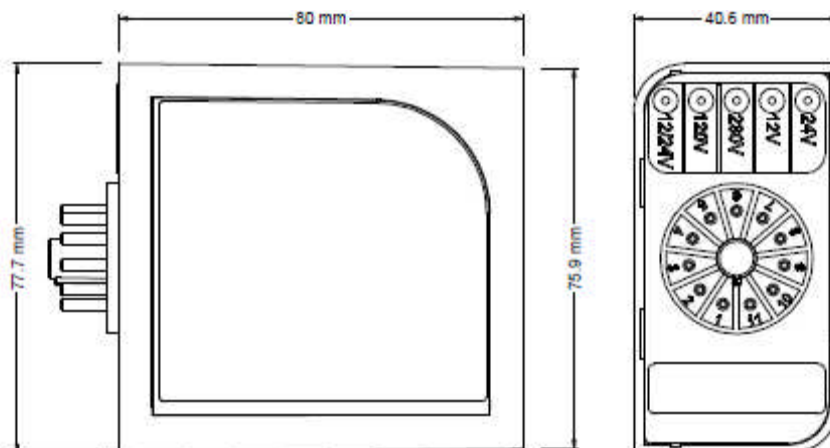

PD130 Enhanced - User Instructions

Page 6 of 9

4. Wiring Connections

11-pin connector wiring

pin	colour	designation	
1	Red	Live	230V AC 50/60 Hz
2	Black	Neutral	OR 12 - 24V AC/DC
3	Grey	Pulse Relay	Normally Open contact
4	Violet	Pulse Relay	Common contact
5	Yellow	Presence Relay	Normally Open contact
6	Brown	Presence Relay	Common contact
7	Blue	Loop	Twist this pair
8	Blue	Loop	
9	Green	Earth	
10	Pink	Presence Relay	Normally Closed contact
11	White	Pulse Relay	Normally Closed contact

5. Part Numbers

<u>Part Number</u>	<u>Model Number</u>	<u>Description</u>
301FT0101_01	PD132 - Enhanced	230 V ac operation
301FT0122_01	PD134 - Standard	12 - 24V ac/dc operation
895FT 0001	DU100 - English	Hand Held Diagnostic Unit
301FT0041		Option - 1 metre plug and harness
CTR119090		DIN Rail Screw terminal base

6. Installation Guide

Optimum functioning of the detector module is largely dependent on factors associated with the inductive sensor loop connected to it. These factors include choice of material, loop configuration and correct installation practice. A successful inductive loop vehicle detection system can be achieved bearing the following constraints in mind, and strictly following the installation instructions. The detector must be installed in a convenient weatherproof location as close as possible to the loop.

6.1. Operational Constraints

6.1.1. Crosstalk

When two loop configurations are in close proximity, the magnetic fields of one can overlap and disturb the field of the other. This phenomenon, known as crosstalk, can cause false detects and detector lock-up.

Crosstalk between adjacent loops operating from different detector modules can be eliminated by:

1. Careful choice of operating frequency. The closer together the two loops, the further apart the frequencies of operation must be.
2. Separation between adjacent loops. Where possible a minimum spacing of 2 metres between loops should be adhered to.
3. Careful screening of feeder cables if they are routed together with other electric cables. The screen must be earthed at the detector end only.

6.1.2. Reinforcing

The existence of reinforced steel below the road surface has the effect of reducing the inductance, and therefore the sensitivity, of the loop detection system. Hence, where reinforcing exists 2 turns should be added to the normal loop, as referred to in section 5.3.

The ideal minimum spacing between the loop and the cable and steel reinforcing is 150mm, although this is not always practically possible. The slot depth should be kept as shallow as possible, taking care that the feeder remains exposed after the sealing compound has been applied.

WARNING : Cutting into post tensioned concrete slabs can have catastrophic consequences. As a general rule 30mm is the deepest slot depth allowable in such cases. When any doubt exists the structural engineer's approval must be sought prior to commencement.

6.2. Loop and Feeder Specification

The loop and feeder should preferably constitute a single unjoined length of insulated copper conductor, with a minimum rating 15Amp.

Joints in the loop or feeder are not recommended. Where this is not possible, joints are to be soldered and terminated in a waterproof junction box. This is extremely important for reliable detector performance.

6.3. Sensing Loop Geometry

Sensing loops should, unless site conditions prohibit, be rectangular in shape and should normally be installed with the longest sides at right angle to the direction of traffic movement. These sides should ideally be 1 metre apart.

PD130 Enhanced - User Instructions

The length of the loop will be determined by the width of the roadway to be monitored. The loop should reach to within 300mm of each edge of the roadway.

In general, loops having a circumference measurement in excess of 10 metres should be installed using two turns of wire, while loops of less than 10 metres in circumference, should have three turns or more. Loops having a circumference measurement less than 6 metre should have four turns. It is good practice at time of installation to construct adjacent loops with alternate three and four turn windings.

7. Loop Installation

All permanent loop installations should be installed in the roadway by cutting slots with a masonry cutting disc or similar devise. A 45° crosscut should be made across the loop corners to reduce the chance of damage that can be caused to the loop at right angle corners.

NOMINAL SLOT WIDTH: 45mm

NOMINAL SLOT DEPTH : 30mm TO 50mm

A slot must also be cut from the loop circumference at one corner of the loop to the roadway edge to accommodate the feeder.

A continuous loop and feeder is obtained by leaving a tail long enough o reach the detector before inserting the cable into the loop slot. Once the required number of turns of wire is wound into the slot around the loop circumference, the wire is routed again via the feeder slot to the roadway edge. A similar length is allowed to reach the detector and these two free ends are twisted together to ensure they remain in close proximity to one another (minimum 20 turns per metre). Maximum recommended feeder length is 100 metres.

It should be noted that the loop sensitivity decreases as the feeder length increases, so ideally the feeder cable should be kept as short as possible.

The loops are sealed using “quick-set” black epoxy compound or hot bitumen mastic to blend with the roadway surface.

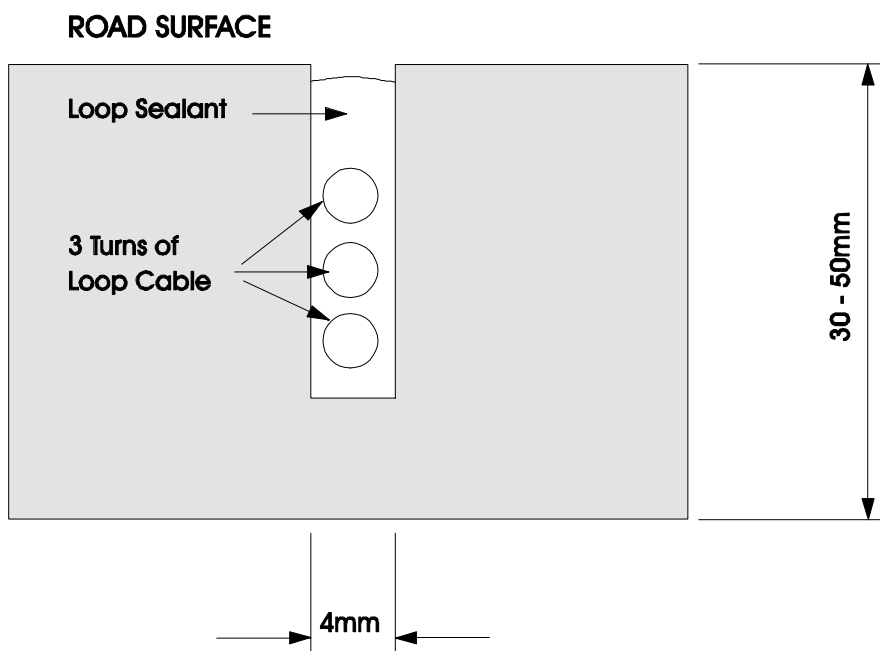


Figure 1 Slot details

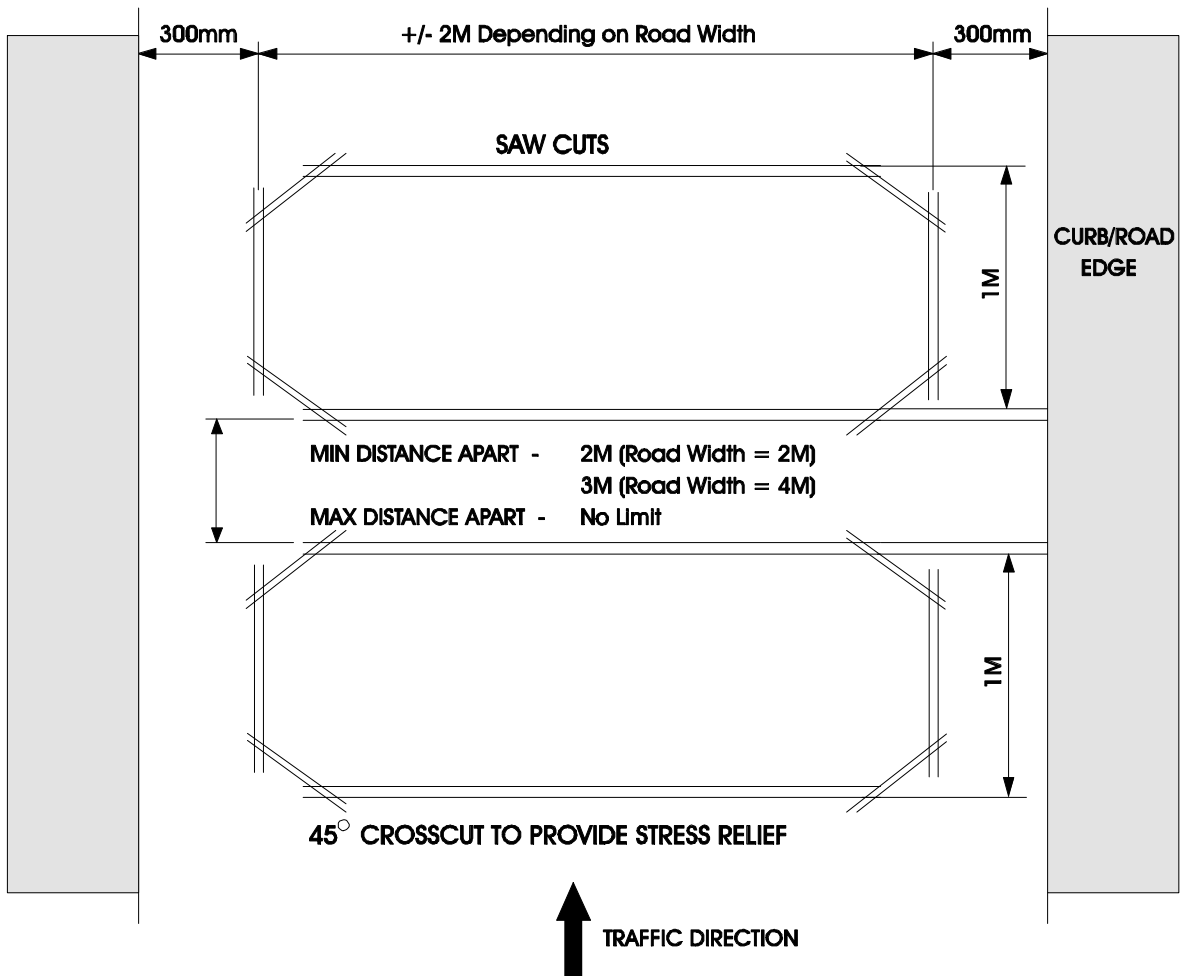


Figure 2 Adjacent loops connected to different detector modules

SELF INSTALL - NEED TECHNICAL ASSISTANCE?

OPTION 1: DIRECT WITH THE SERVICE DESK – QUICKEST AND MOST EFFECTIVE METHOD

Submit your enquiry direct with the service desk at – service@automaticsolutions.com.au

The service desk has the most experienced staff in Australia to help with your problem but they need your help.

- Describe your problem in detail and as clearly as possible. Don't forget to include a telephone number.
- Be certain to detail which model or models of you are working with.
- Send photos of the installation – they love photos. The people at the service desk are good but they are even better when they can see the installation. Send photos of the overall scene so they can see the entire installation. Also send photos of the wiring to the control board and any other part of the installation you think is relevant.
- Send video if appropriate. Smartphone's these days take remarkably good video in small file sizes which can be emailed in a moment. If your problem needs a video to show the issue please feel free to send it.

**NOTE: THIS IS BY FAR THE FASTEST AND MOST SUCCESSFUL WAY TO SOLVE YOUR PROBLEM
PHOTOS AND VIDEOS ARE THE NEXT BEST THING TO BEING THERE**

OPTION 2: LODGE YOUR ENQUIRY LOCALLY - SLOWER BUT CAN STILL BE EFFECTIVE

Make contact with the store of purchase. Branch staffs are typically not technicians and dependent on their length of service will have varying degrees of technical knowledge. If they cannot help however they will certainly either source help locally from their technicians or make contact with the service technicians on your behalf.

OPTION 3: SERVICE CALL WITH AUTOMATIC SOLUTIONS TECHNICIAN – SLOWEST METHOD

If you fall within the local branch service area it may be possible to book a local technician to look at your installation. Wait times will vary dependent on local workloads. The cost is a service fee which includes the first half hour and the hourly rate thereafter. If any Automatic Solutions provided parts are found to be defective and within warranty these will be provided free of charge.

(NOTE: If you suspect that any parts are defective and within warranty you may wish to consider option 4)

A note on this option: If you decide on this option you will be asked to sign an "authorisation to proceed" which will provide legal authority and payment security. This form has three options available of which only the first two are available to you. The third option is for warranty repairs only for full install customers. Self install customers requiring warranty only service need to refer to option four below.

IMPORTANT: IN SHORT THIS OPTION WILL INCUR CHARGES

OPTION 4: RETURN THE PRODUCT IF BELIEVED TO BE FAULTY

As a self install customer who has purchased product if you believe the product to be faulty rather than an installation or site problem you have the option of returning the product for evaluation and to exercise your right to a replacement, repair or refund as applicable. All returned product is forwarded immediately to the service technicians for evaluation and response. There are two main methods available to return product –

- Direct to the service centre – this is the quickest method as it cuts out the branch delay
- Via the branch of purchase – slower because of the delay at the branch

When choosing this option you need to complete a product return form. This form gives you all the information on procedure involved and where to send to. These are available at the branch of purchase, can be emailed to you (contact your branch), or available here - <http://automaticsolutions.com.au/page/warranty.php>